

# ColoQuick Pasteur + MAXX4

# **DIAGNOSTIC MENU**

The diagnostic menu makes it possible to test the installation, to make sure hot and cold tap water is present and the drain function works.

If the machine reports an error then the diagnostic menu can help finding the cause of the problem and thereby help to a faster solution of the problem.

To enter diagnostic menu press the



key and enter 9990. Finish with



To select which function to test press the





Press the START key to activate a function

key to de-activate a function. Press the STOP

Notice: Not all functions are available on all models

Heater T1=42.0°C

T=42.0°C B1=42.0°C

B2=42.0°C

Pos: 1

## **Check heater function**

T1 - Top sensor temperature

B1 - Bottom heater 1 temperature

B2 – Bottom heater 2 temperature



**Check motor function** 



keys to switch heater on / off

Motor PWM

05

Select speed with






Press



STOP keys to start/stop motor






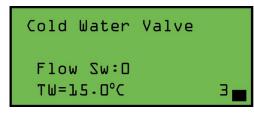

#### Check cold water in valve

Press START / STOP keys to open / close valve

Remark: The valve can't be opened at water level 4



## Check cold water in valve

Press START / STOP keys to open / close valve

Remark: The valve can't be opened at water level 4



## **Drain water**

Press START / STOP keys to open / close water valve

To leave the diagnostic menu, press the



# Status menu

Pressing the



button from the main menu will display the sensor status menu.

FlowSw:l Tl=42.0°C
Motor: l Bl=42.0°C
T =42.0°C B2=42.0°C
TI=25.0°C TW=20.0°C

•	FlowSw	Tap water flow switch
•	Motor	Motor position switch
•	TI	Controller internal temperature
•	T1	Top temperature sensor
•	B1	Bottom temperature sensor #1
•	B2	Bottom temperature sensor #2
•	TW	Tap water temperature (only correct, when water is running)

Notice: Not all sensors are available on all models

